

コネクタ付ケーブル

■R03P コネクタ対応型番表

形状仕様	芯数	コネクタ付ケーブル型番	CN1	部材ページ	CN2	部材ページ
P PT	2	R03P-P-□-2	R03-PB2M	○240 ページ		
	3	R03P-P-□-3	R03-PB3M			
	5	R03P-P-□-5	R03-PB5M			
	6	R03P-P-□-6	R03-PB6M			
	8	R03P-P-□-8	R03-PB8M			
12	R03P-P-□-12	R03-PB12M				
S ST	2	R03P-S-□-2	R03-PB2F	○240 ページ		
	3	R03P-S-□-3	R03-PB3F			
	5	R03P-S-□-5	R03-PB5F			
	6	R03P-S-□-6	R03-PB6F			
	8	R03P-S-□-8	R03-PB8F			
12	R03P-S-□-12	R03-PB12F				
PP	2	R03P-PP-□-2	R03-PB2M	○240 ページ	R03-PB2M	○240 ページ
	3	R03P-PP-□-3	R03-PB3M		R03-PB3M	
	5	R03P-PP-□-5	R03-PB5M		R03-PB5M	
	6	R03P-PP-□-6	R03-PB6M		R03-PB6M	
	8	R03P-PP-□-8	R03-PB8M		R03-PB8M	
12	R03P-PP-□-12	R03-PB12M	R03-PB12M			
SS	2	R03P-SS-□-2	R03-PB2F	○240 ページ	R03-PB2F	○240 ページ
	3	R03P-SS-□-3	R03-PB3F		R03-PB3F	
	5	R03P-SS-□-5	R03-PB5F		R03-PB5F	
	6	R03P-SS-□-6	R03-PB6F		R03-PB6F	
	8	R03P-SS-□-8	R03-PB8F		R03-PB8F	
12	R03P-SS-□-12	R03-PB12F	R03-PB12F			
PS	2	R03P-PS-□-2	R03-PB2M	○240 ページ	R03-PB2F	○240 ページ
	3	R03P-PS-□-3	R03-PB3M		R03-PB3F	
	5	R03P-PS-□-5	R03-PB5M		R03-PB5F	
	6	R03P-PS-□-6	R03-PB6M		R03-PB6F	
	8	R03P-PS-□-8	R03-PB8M		R03-PB8F	
12	R03P-PS-□-12	R03-PB12M	R03-PB12F			
PY	2	R03P-PY-□-2	R03-PB2M	○240 ページ	F1.25-V3.5	○468 ページ
	3	R03P-PY-□-3	R03-PB3M		F1.25-V3.5	
	5	R03P-PY-□-5	R03-PB5M		F1.25-V3.5	
	6	R03P-PY-□-6	R03-PB6M		F1.25-V3.5	
	8	R03P-PY-□-8	R03-PB8M		F1.25-V3.5	
12	R03P-PY-□-12	R03-PB12M	F1.25-V3.5			
SY	2	R03P-SY-□-2	R03-PB2F	○240 ページ	F1.25-V3.5	○468 ページ
	3	R03P-SY-□-3	R03-PB3F		F1.25-V3.5	
	5	R03P-SY-□-5	R03-PB5F		F1.25-V3.5	
	6	R03P-SY-□-6	R03-PB6F		F1.25-V3.5	
	8	R03P-SY-□-8	R03-PB8F		F1.25-V3.5	
12	R03P-SY-□-12	R03-PB12F	F1.25-V3.5			
RP RPT RPRT	2	R03P-RP-□-2	R03-RB2M	○241 ページ		
	3	R03P-RP-□-3	R03-RB3M			
	5	R03P-RP-□-5	R03-RB5M			
	6	R03P-RP-□-6	R03-RB6M			
	8	R03P-RP-□-8	R03-RB8M			
12	R03P-RP-□-12	R03-RB12M				
RS RST RSRT	2	R03P-RS-□-2	R03-RB2F	○241 ページ		
	3	R03P-RS-□-3	R03-RB3F			
	5	R03P-RS-□-5	R03-RB5F			
	6	R03P-RS-□-6	R03-RB6F			
	8	R03P-RS-□-8	R03-RB8F			
12	R03P-RS-□-12	R03-RB12F				

- コネクタ付ケーブル選定方法
- 角型コネクタ付ケーブル
- 同軸コネクタ付ケーブル
- 丸型コネクタ付ケーブル
- ナイロンコネクタ付ケーブル
- カスタムサービス
- コネクタ付ケーブル資料

■R03J コネクタ対応型番表

形状仕様	芯数	コネクタ付ケーブル型番	CN1	部材ページ	CN2	部材ページ
JP JPT	2	R03J-JP-□-2	R03-JB2M	○240 ページ		
	3	R03J-JP-□-3	R03-JB3M			
	5	R03J-JP-□-5	R03-JB5M			
	6	R03J-JP-□-6	R03-JB6M			
	8	R03J-JP-□-8	R03-JB8M			
12	R03J-JP-□-12	R03-JB12M				
JS JST	2	R03J-JS-□-2	R03-JB2F	○240 ページ		
	3	R03J-JS-□-3	R03-JB3F			
	5	R03J-JS-□-5	R03-JB3F			
	6	R03J-JS-□-6	R03-JB6F			
	8	R03J-JS-□-8	R03-JB8F			
12	R03J-JS-□-12	R03-JB12F				
JPP	2	R03J-JPP-□-2	R03-JB2M	○240 ページ	R03-PB2M	○240 ページ
	3	R03J-JPP-□-3	R03-JB3M		R03-PB3M	
	5	R03J-JPP-□-5	R03-JB5M		R03-PB5M	
	6	R03J-JPP-□-6	R03-JB6M		R03-PB6M	
	8	R03J-JPP-□-8	R03-JB8M		R03-PB8M	
12	R03J-JPP-□-12	R03-JB12M	R03-PB12M			
JSS	2	R03J-JSS-□-2	R03-JB2F	○240 ページ	R03-PB2F	○240 ページ
	3	R03J-JSS-□-3	R03-JB3F		R03-PB3F	
	5	R03J-JSS-□-5	R03-JB3F		R03-PB5F	
	6	R03J-JSS-□-6	R03-JB6F		R03-PB6F	
	8	R03J-JSS-□-8	R03-JB8F		R03-PB8F	
12	R03J-JSS-□-12	R03-JB12F	R03-PB12F			
JPS	2	R03J-JPS-□-2	R03-JB2M	○240 ページ	R03-PB2F	○240 ページ
	3	R03J-JPS-□-3	R03-JB3M		R03-PB3F	
	5	R03J-JPS-□-5	R03-JB5M		R03-PB5F	
	6	R03J-JPS-□-6	R03-JB6M		R03-PB6F	
	8	R03J-JPS-□-8	R03-JB8M		R03-PB8F	
12	R03J-JPS-□-12	R03-JB12M	R03-PB12F			
JSP	2	R03J-JSP-□-2	R03-JB2F	○240 ページ	R03-PB2M	○240 ページ
	3	R03J-JSP-□-3	R03-JB3F		R03-PB3M	
	5	R03J-JSP-□-5	R03-JB5F		R03-PB5M	
	6	R03J-JSP-□-6	R03-JB6F		R03-PB6M	
	8	R03J-JSP-□-8	R03-JB8F		R03-PB8M	
12	R03J-JSP-□-12	R03-JB12F	R03-PB12M			
JPY	2	R03J-JPY-□-2	R03-JB2M	○240 ページ	F1.25-V3.5	○468 ページ
	3	R03J-JPY-□-3	R03-JB3M		F1.25-V3.5	
	5	R03J-JPY-□-5	R03-JB5M		F1.25-V3.5	
	6	R03J-JPY-□-6	R03-JB6M		F1.25-V3.5	
	8	R03J-JPY-□-8	R03-JB8M		F1.25-V3.5	
12	R03J-JPY-□-12	R03-JB12M	F1.25-V3.5			
JSY	2	R03J-JSY-□-2	R03-JB2F	○240 ページ	F1.25-V3.5	○468 ページ
	3	R03J-JSY-□-3	R03-JB3F		F1.25-V3.5	
	5	R03J-JSY-□-5	R03-JB5F		F1.25-V3.5	
	6	R03J-JSY-□-6	R03-JB6F		F1.25-V3.5	
	8	R03J-JSY-□-8	R03-JB8F		F1.25-V3.5	
12	R03J-JSY-□-12	R03-JB12F	F1.25-V3.5			
JPPJ	2	R03J-JPP-□-2	R03-JB2M	○240 ページ	R03-JB2M	○240 ページ
	3	R03J-JPP-□-3	R03-JB3M		R03-JB3M	
	5	R03J-JPP-□-5	R03-JB5M		R03-JB5M	
	6	R03J-JPP-□-6	R03-JB6M		R03-JB6M	
	8	R03J-JPP-□-8	R03-JB8M		R03-JB8M	
12	R03J-JPP-□-12	R03-JB12M	R03-JB12M			
JSJS	2	R03J-JSS-□-2	R03-JB2F	○240 ページ	R03-JB2F	○240 ページ
	3	R03J-JSS-□-3	R03-JB3F		R03-JB3F	
	5	R03J-JSS-□-5	R03-JB3F		R03-JB3F	
	6	R03J-JSS-□-6	R03-JB6F		R03-JB6F	
	8	R03J-JSS-□-8	R03-JB8F		R03-JB8F	
12	R03J-JSS-□-12	R03-JB12F	R03-JB12F			
JPJS	2	R03J-JPS-□-2	R03-JB2M	○240 ページ	R03-JB2F	○240 ページ
	3	R03J-JPS-□-3	R03-JB3M		R03-JB3F	
	5	R03J-JPS-□-5	R03-JB5M		R03-JB3F	
	6	R03J-JPS-□-6	R03-JB6M		R03-JB6F	
	8	R03J-JPS-□-8	R03-JB8M		R03-JB8F	
12	R03J-JPS-□-12	R03-JB12M	R03-JB12F			