

■HR10AP コネクタ対応型番表

形状仕様	芯数	型番	CN1	部材ページ	CN2	部材ページ
P	4	HR10AP-P-□-4	HR10A-7P-4P73			
	6	HR10AP-P-□-6	HR10A-7P-6P73	○310		
	10	HR10AP-P-□-10	HR10A-10P-10P73	ページ		
	12	HR10AP-P-□-12	HR10A-10P-12P73			
PT	4	HR10AP-PT-□-4	HR10A-7P-4P73			
	6	HR10AP-PT-□-6	HR10A-7P-6P73	○310		
	10	HR10AP-PT-□-10	HR10A-10P-10P73	ページ		
	12	HR10AP-PT-□-12	HR10A-10P-12P73			
S	4	HR10AP-S-□-4	HR10A-7P-4S73			
	6	HR10AP-S-□-6	HR10A-7P-6S73	○310		
	10	HR10AP-S-□-10	HR10A-10P-10S73	ページ		
	12	HR10AP-S-□-12	HR10A-10P-12S73			
ST	4	HR10AP-ST-□-4	HR10A-7P-4S73			
	6	HR10AP-ST-□-6	HR10A-7P-6S73	○310		
	10	HR10AP-ST-□-10	HR10A-10P-10S73	ページ		
	12	HR10AP-ST-□-12	HR10A-10P-12S73			
PP	4	HR10AP-PP-□-4	HR10A-7P-4P73		HR10A-7P-4P73	
	6	HR10AP-PP-□-6	HR10A-7P-6P73	○310	HR10A-7P-6P73	○310
	10	HR10AP-PP-□-10	HR10A-10P-10P73	ページ	HR10A-10P-10P73	ページ
	12	HR10AP-PP-□-12	HR10A-10P-12P73		HR10A-10P-12P73	
SS	4	HR10AP-SS-□-4	HR10A-7P-4S73		HR10A-7P-4S73	
	6	HR10AP-SS-□-6	HR10A-7P-6S73	○310	HR10A-7P-6S73	○310
	10	HR10AP-SS-□-10	HR10A-10P-10S73	ページ	HR10A-10P-10S73	ページ
	12	HR10AP-SS-□-12	HR10A-10P-12S73		HR10A-10P-12S73	
PS	4	HR10AP-PS-□-4	HR10A-7P-4P73		HR10A-7P-4S73	
	6	HR10AP-PS-□-6	HR10A-7P-6P73	○310	HR10A-7P-6S73	○310
	10	HR10AP-PS-□-10	HR10A-10P-10P73	ページ	HR10A-10P-10S73	ページ
	12	HR10AP-PS-□-12	HR10A-10P-12P73		HR10A-10P-12S73	
PY	4	HR10AP-PY-□-4	HR10A-7P-4P73		FO.3-3.5	
	6	HR10AP-PY-□-6	HR10A-7P-6P73	○310	FO.3-3.5	○468
	10	HR10AP-PY-□-10	HR10A-10P-10P73	ページ	FO.3-3.5	ページ
	12	HR10AP-PY-□-12	HR10A-10P-12P73		FO.3-3.5	
SY	4	HR10AP-SY-□-4	HR10A-7P-4S73		FO.3-3.5	
	6	HR10AP-SY-□-6	HR10A-7P-6S73	○310	FO.3-3.5	○468
	10	HR10AP-SY-□-10	HR10A-10P-10S73	ページ	FO.3-3.5	ページ
	12	HR10AP-SY-□-12	HR10A-10P-12S73		FO.3-3.5	
RP	4	HR10AP-RP-□-4	HR10G-7R-4P73			
	6	HR10AP-RP-□-6	HR10G-7R-6P73	○311		
	10	HR10AP-RP-□-10	HR10G-10R-10P73	ページ		
	12	HR10AP-RP-□-12	HR10G-10R-12P73			
RPT	4	HR10AP-RPT-□-4	HR10G-7R-4P73			
	6	HR10AP-RPT-□-6	HR10G-7R-6P73	○311		
	10	HR10AP-RPT-□-10	HR10G-10R-10P73	ページ		
	12	HR10AP-RPT-□-12	HR10G-10R-12P73			
RPRT	4	HR10AP-RPRT-□-4	HR10G-7R-4P73			
	6	HR10AP-RPRT-□-6	HR10G-7R-6P73	○311		
	10	HR10AP-RPRT-□-10	HR10G-10R-10P73	ページ		
	12	HR10AP-RPRT-□-12	HR10G-10R-12P73			
RS	4	HR10AP-RS-□-4	HR10G-7R-4S73			
	6	HR10AP-RS-□-6	HR10G-7R-6S73	○311		
	10	HR10AP-RS-□-10	HR10G-10R-10S71	ページ		
	12	HR10AP-RS-□-12	HR10G-10R-12S71			
RST	4	HR10AP-RST-□-4	HR10G-7R-4S73			
	6	HR10AP-RST-□-6	HR10G-7R-6S73	○311		
	10	HR10AP-RST-□-10	HR10G-10R-10S71	ページ		
	12	HR10AP-RST-□-12	HR10G-10R-12S71			
RSRT	4	HR10AP-RSRT-□-4	HR10G-7R-4S73			
	6	HR10AP-RSRT-□-6	HR10G-7R-6S73	○311		
	10	HR10AP-RSRT-□-10	HR10G-10R-10S71	ページ		
	12	HR10AP-RSRT-□-12	HR10G-10R-12S71			

■HR10AJ コネクタ対応型番表

形状仕様	芯数	型番	CN1	部材ページ	CN2	部材ページ
JP	4	HR10AJ-JP-□-4	HR10A-7J-4P73			
	6	HR10AJ-JP-□-6	HR10A-7J-6P73	○310		
	10	HR10AJ-JP-□-10	HR10A-10J-10P73	ページ		
	12	HR10AJ-JP-□-12	HR10A-10J-12P73			
JPT	4	HR10AJ-JPT-□-4	HR10A-7J-4P73			
	6	HR10AJ-JPT-□-6	HR10A-7J-6P73	○310		
	10	HR10AJ-JPT-□-10	HR10A-10J-10P73	ページ		
	12	HR10AJ-JPT-□-12	HR10A-10J-12P73			
JS	4	HR10AJ-JS-□-4	HR10A-7J-4S73			
	6	HR10AJ-JS-□-6	HR10A-7J-6S73	○310		
	10	HR10AJ-JS-□-10	HR10A-10J-10S73	ページ		
	12	HR10AJ-JS-□-12	HR10A-10J-12S73			
JST	4	HR10AJ-JST-□-4	HR10A-7J-4S73			
	6	HR10AJ-JST-□-6	HR10A-7J-6S73	○310		
	10	HR10AJ-JST-□-10	HR10A-10J-10S73	ページ		
	12	HR10AJ-JST-□-12	HR10A-10J-12S73			
JPP	4	HR10AJ-JPP-□-4	HR10A-7J-4P73		HR10A-7P-4P73	
	6	HR10AJ-JPP-□-6	HR10A-7J-6P73	○310	HR10A-7P-6P73	○310
	10	HR10AJ-JPP-□-10	HR10A-10J-10P73	ページ	HR10A-10P-10P73	ページ
	12	HR10AJ-JPP-□-12	HR10A-10J-12P73		HR10A-10P-12P73	
JSS	4	HR10AJ-JSS-□-4	HR10A-7J-4S73		HR10A-7P-4S73	
	6	HR10AJ-JSS-□-6	HR10A-7J-6S73	○310	HR10A-7P-6S73	○310
	10	HR10AJ-JSS-□-10	HR10A-10J-10S73	ページ	HR10A-10P-10S73	ページ
	12	HR10AJ-JSS-□-12	HR10A-10J-12S73		HR10A-10P-12S73	
JPS	4	HR10AJ-JPS-□-4	HR10A-7J-4P73		HR10A-7P-4S73	
	6	HR10AJ-JPS-□-6	HR10A-7J-6P73	○310	HR10A-7P-6S73	○310
	10	HR10AJ-JPS-□-10	HR10A-10J-10P73	ページ	HR10A-10P-10S73	ページ
	12	HR10AJ-JPS-□-12	HR10A-10J-12P73		HR10A-10P-12S73	
JSP	4	HR10AJ-JSP-□-4	HR10A-7J-4S73		HR10A-7P-4P73	
	6	HR10AJ-JSP-□-6	HR10A-7J-6S73	○310	HR10A-7P-6P73	○310
	10	HR10AJ-JSP-□-10	HR10A-10J-10S73	ページ	HR10A-10P-10P73	ページ
	12	HR10AJ-JSP-□-12	HR10A-10J-12S73		HR10A-10P-12P73	
JPY	4	HR10AJ-JPY-□-4	HR10A-7J-4P73		FO.3-3.5	
	6	HR10AJ-JPY-□-6	HR10A-7J-6P73	○310	FO.3-3.5	○468
	10	HR10AJ-JPY-□-10	HR10A-10J-10P73	ページ	FO.3-3.5	ページ
	12	HR10AJ-JPY-□-12	HR10A-10J-12P73		FO.3-3.5	
JSY	4	HR10AJ-JSY-□-4	HR10A-7J-4S73		FO.3-3.5	
	6	HR10AJ-JSY-□-6	HR10A-7J-6S73	○310	FO.3-3.5	○468
	10	HR10AJ-JSY-□-10	HR10A-10J-10S73	ページ	FO.3-3.5	ページ
	12	HR10AJ-JSY-□-12	HR10A-10J-12S73		FO.3-3.5	
JPJP	4	HR10AJ-JPJP-□-4	HR10A-7J-4P73		HR10A-7J-4P73	
	6	HR10AJ-JPJP-□-6	HR10A-7J-6P73	○310	HR10A-7J-6P73	○310
	10	HR10AJ-JPJP-□-10	HR10A-10J-10P73	ページ	HR10A-10J-10P73	ページ
	12	HR10AJ-JPJP-□-12	HR10A-10J-12P73		HR10A-10J-12P73	
JSJS	4	HR10AJ-JSJS-□-4	HR10A-7J-4S73		HR10A-7J-4S73	
	6	HR10AJ-JSJS-□-6	HR10A-7J-6S73	○310	HR10A-7J-6S73	○310
	10	HR10AJ-JSJS-□-10	HR10A-10J-10S73	ページ	HR10A-10J-10S73	ページ
	12	HR10AJ-JSJS-□-12	HR10A-10J-12S73		HR10A-10J-12S73	
JPJS	4	HR10AJ-JPJS-□-4	HR10A-7J-4P73		HR10A-7J-4P73	
	6	HR10AJ-JPJS-□-6	HR10A-7J-6P73	○310	HR10A-7J-6P73	○310
	10	HR10AJ-JPJS-□-10	HR10A-10J-10P73	ページ	HR10A-10J-10S73	ページ
	12	HR10AJ-JPJS-□-12	HR10A-10J-12P73		HR10A-10J-12S73	

- コネクタ付ケーブル選定方法
- 角型コネクタ付ケーブル
- 同軸コネクタ付ケーブル
- 丸型コネクタ付ケーブル
- ナイロンコネクタ付ケーブル
- カスタムサービス
- コネクタ付ケーブル資料