


Keystone Jack Installing Instruction

KJ32 Tool Free

1

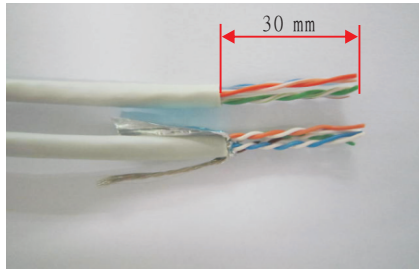

Strip approximately 30mm of the cable jacket, cut off the plastic cross, and separate the wire into 4 pairs.

2

Wiring Configurations

T568A

Pin 5 White/Blue
Pin 4 Blue

Pin 1 White/Green
Pin 2 Green

Pin 3 White/Orange
Pin 6 Orange

Pin 7 White/Brown
Pin 8 Brown

T568B


Pin 5 White/Blue
Pin 4 Blue

Pin 1 White/Orange
Pin 2 Orange


Pin 3 White/Green
Pin 6 Green

Pin 7 White/Brown
Pin 8 Brown


Option 1

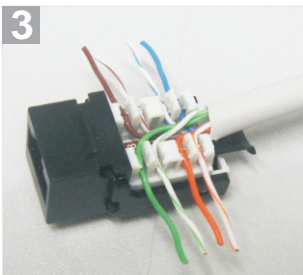

3 Terminate one pair at a time starting from rear of connector. Install each pair after replacement will prevent crushing the inside pairs with the punchdown tool.


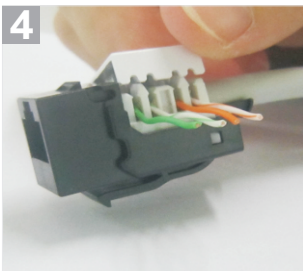


4 To fasten the wires pressing cover onto IDC. Excess wire length will be extending out of the sides of the jack.

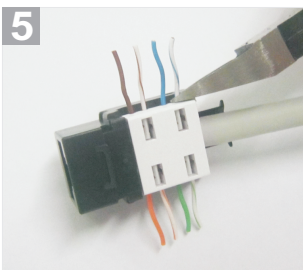

5 Trim the excess wire flush with the cover. It's recommended the tip of wires is not more than 0.2mm.


Option 2

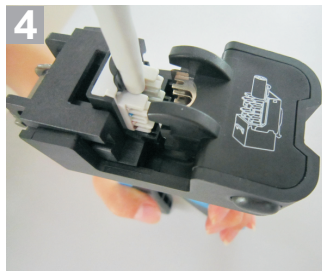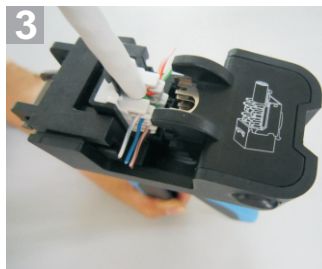

Use KJ-TLM series to terminate and cut 4-pairs of wires simultaneously finishing installations. Snap the jack's cover back on, over the wires.

Unshielded

Shielded

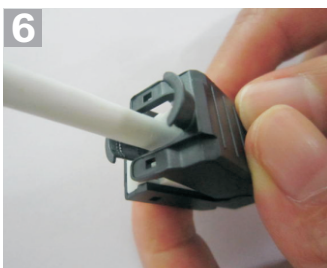

6 Place the wing cap over the terminated wires for secure connection .



7 Fasten cable with a cable tie.



8 Wrap the drain wire around the shielded holder.